

MISS K F6255000

EN

RF11791

INTERNAL DIFFUSER



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

MISS K F6255000

EN

RF11791

INTERNAL DIFFUSER

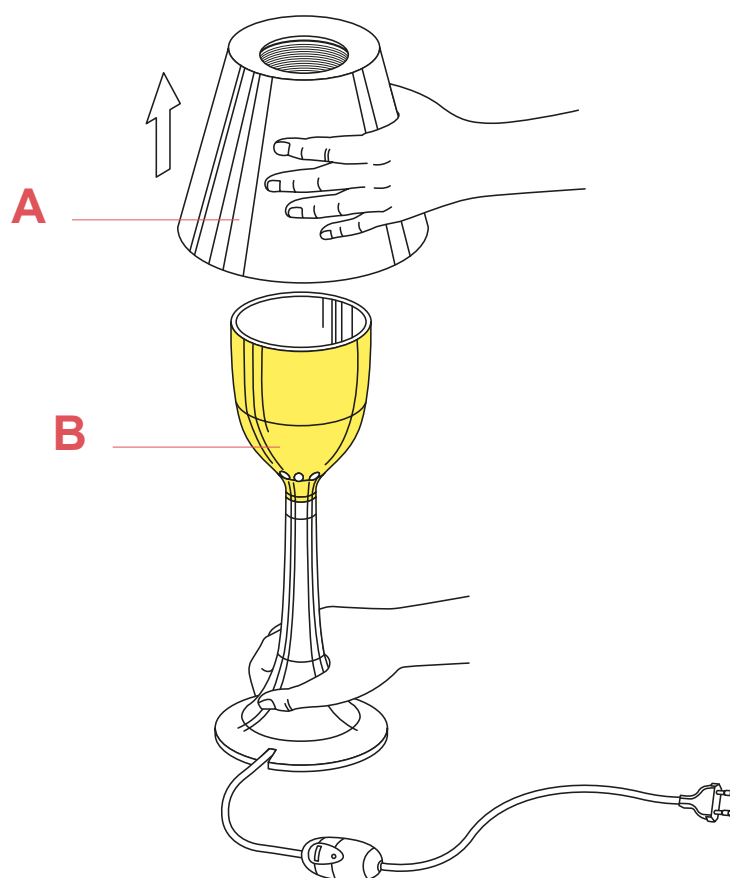


Fig.1

Remove the external diffuser (A) from the internal diffuser (B).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

MISS K F6255000

EN

RF11791

INTERNAL DIFFUSER

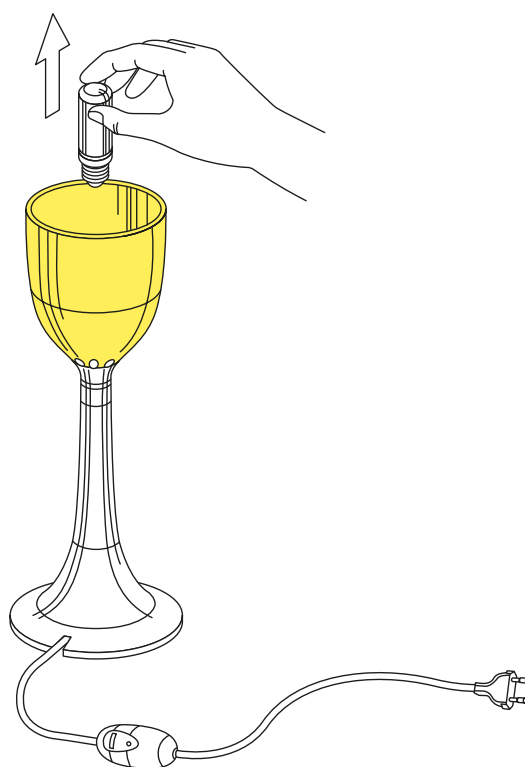


Fig.2

Remove the lamp bulb.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

MISS K F6255000

EN

RF11791

INTERNAL DIFFUSER



Fig.3

Unfasten the 2 screws (C) inside the lamp holder (D).

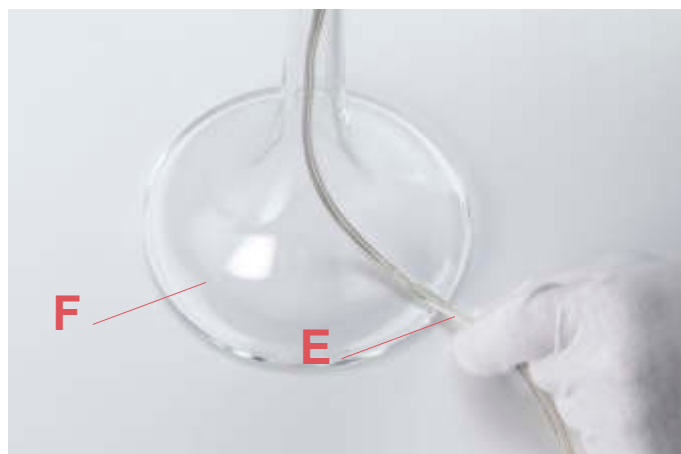


Fig.4

Push through the lamp base (F) some spare electrical cable (E).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

MISS K F6255000

EN

RF11791

INTERNAL DIFFUSER

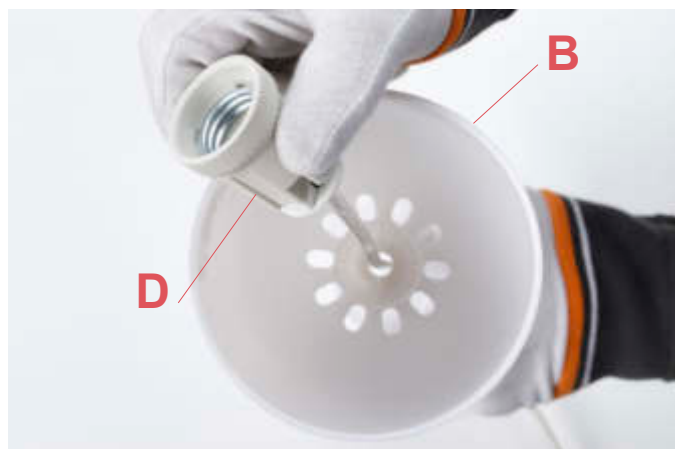


Fig.5

Extract the lamp holder (D) from the internal diffuser (B).

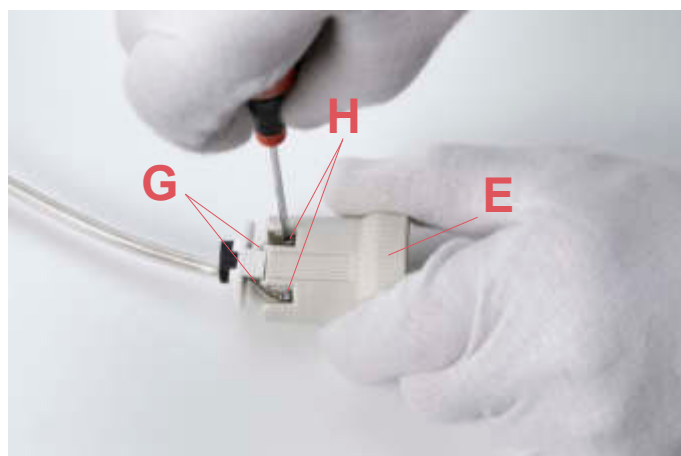


Fig.6

Disconnect the electrical wires (G) from the terminals (H) of the lamp holder (D).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

MISS K F6255000

EN

RF11791

INTERNAL DIFFUSER

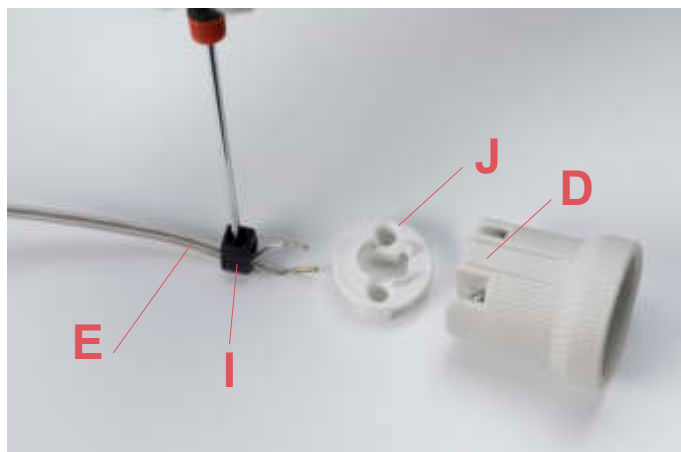


Fig.7

Unfasten the screw of the cable clamp (I).
Slide-off from the electrical cable (E) the lamp holder (D), lamp holder support (J) and cable clamp (I). (Fig.7)

Unfasten the internal diffuser (B) from the lamp base (F). (Fig.8)

Assemble now the new spare-part:
Fasten the internal diffuser (B) on the lamp base (F). (Fig.8)



Fig.8

Insert through the electrical cable (E), the cable clamp (I) and the lamp holder support (J).
Connect the wires to the terminals (H) of the lamp holder (D) respecting the polarities and fasten the screw of the cable clamp (I). (Fig.7)

Insert the lamp holder (D) in his apposite position inside the internal diffuser (B). (Fig.5 page 9)

Pull-out the excess cable (E) present inside the lamp base (F). (Fig.4 page 9)

MISS K F6255000

EN

RF11791

INTERNAL DIFFUSER

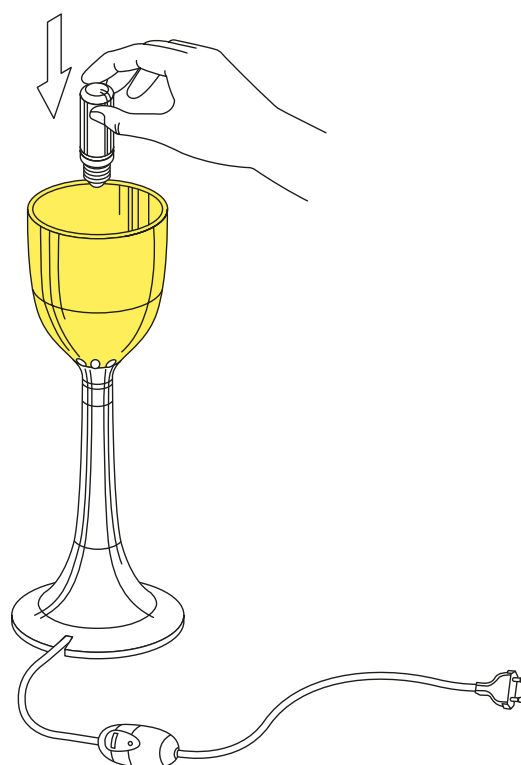


Fig.9

Install the lamp bulb.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

MISS K F6255000

EN

RF11791

INTERNAL DIFFUSER

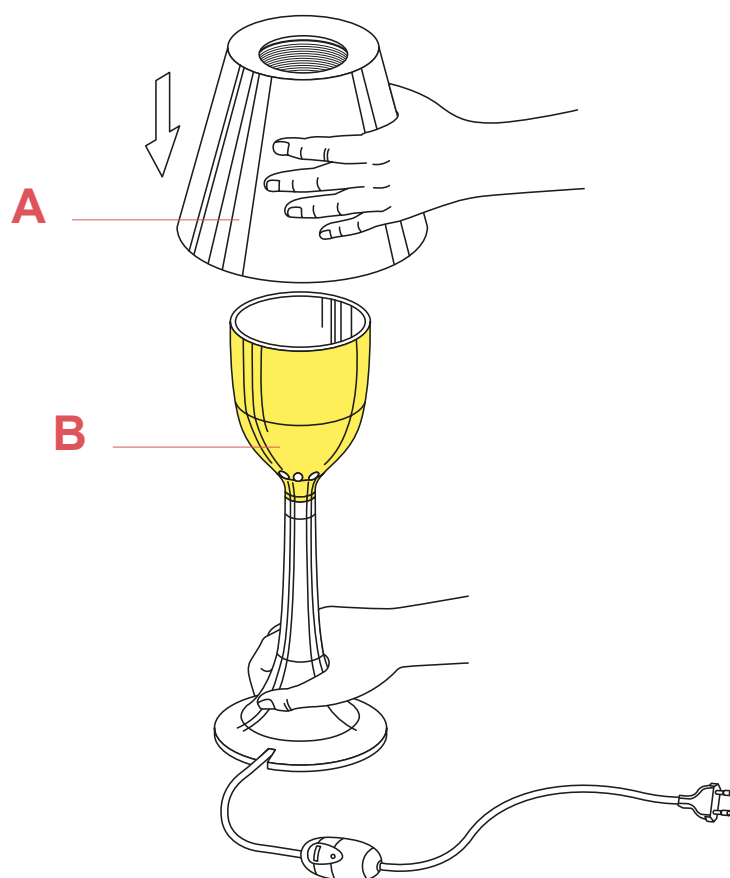


Fig.10

Install the external diffuser (A) on the internal diffuser (B).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.