


HEADDEMOCK SUPERB

ASSEMBLY INSTRUCTIONS


1. Remove the small grey caps at both ends of each corner piece.




2. Make sure the holes in the middle pole of the stand are pointed downwards so they will 'click' in the corner pieces nicely.

3. Connect the corner pieces to the middle pole.

Be sure to use the correct end of the corner
piece (the balance pole needs to be
positioned before the corner).



4. Finally, connect the remaining poles to the corner pieces. Your frame is ready and should look like this:

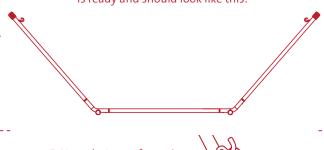


5. Now that your frame is ready, you can attach the headdemock straps to the hooks on both sides.



6. You can easily adjust the distance between the headdemock and the ground by tightening or loosening the straps.

That's it!

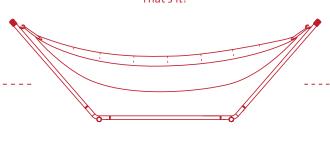

YOUR
HEADDEMOCK
SUPERB IS
READY!

